

Samsung
Galaxy Tab[®] 4
NOOK[®] 10.1

Quick
Start
Guide



Samsung GALAXY Tab4 nook™

QUICK START GUIDE

SAMSUNG ELECTRONICS AMERICA, INC.
85 Challenger Road | Ridgefield Park, NJ 07660
www.samsung.com | www.NOOK.com

© 2014 Samsung Telecommunications America, LLC. Samsung and Galaxy Tab are both trademarks of Samsung Electronics Co., Ltd. NOOK, NOOK Library, NOOK Store, NOOK Video and the NOOK Logo are trademarks of barnesandnoble.com llc or its affiliates. The Big Bang Theory Now Available on NOOK Video™. BIG BANG THEORY and all related characters and elements are trademarks of and © Warner Bros. Entertainment Inc. All Rights Reserved. Android, Google and Google Play are trademarks of Google Inc. Other company and product names mentioned herein may be trademarks of their respective owners. Screen image used with permission of barnesandnoble.com llc. Screen images simulated. Appearance of device may vary.



Printed in Vietnam | 09/2014 | GH68-42364A



SAMSUNG

Galaxy Tab® 4 NOOK® Key Functions

Power/lock button

Front Camera


Speakers

Speakers

Recent

Back

Home button

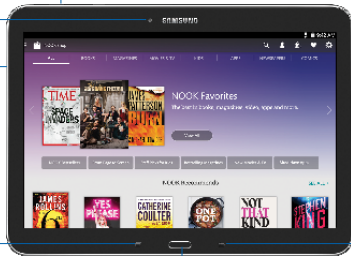

Memory Card Slot

Volume

Rear Camera



USB Charging Port

Basic Functions

Charging the Battery

1. Connect the USB cable to the charging adapter.

NOTE: Connecting the charging adapter improperly may cause serious damage to the device. Any damage caused by misuse is not covered by the warranty.

2. Insert the USB cable into the tablet's USB charging port.
3. Plug the charging adapter into a standard AC power outlet until fully charged.

Turn Your Device On and Off

- To turn on your device, press and hold the **Power/Lock** button for a few seconds until the logo appears. When you turn on your device for the first time, follow the on-screen instructions to set up your device.
- To turn off your device, press and hold the **Power/Lock** button and follow the prompts.

Locking and Unlocking Your Device

By default, the device screen locks when the backlight turns off.

To unlock your device from the lock screen:

- With your device turned on, press the **Power/Lock** button to wake the display and slide your finger across the screen in any direction.

To lock your device screen:

- Press the **Power/Lock** button. The screen goes black.

Initial Device Configuration

1. Tap **Start** or **Accessibility** to access options for interacting with your device and follow the on-screen instructions to complete the set up process.
2. Sign into your NOOK (BN.com) account or create a new one, to access items in your NOOK Library® and to shop for new books and other content.

Turning on Wi-Fi

1. From the Home screen tap **Apps** → **Settings** → **Connections** tab → **Wi-Fi**.
2. Slide the Off button to the right to turn Wi-Fi On.
3. Select the desired network under Wi-Fi networks, enter a password if applicable and tap **Connect**.

Multi Window

Run two applications on the current screen at the same time. Touching the bezel (the black area to the far right edge of the display), use your fingertip to swipe left and open the Multi window tray.

1. From the Home screen tap **Apps** → **Settings** → **Device** tab → **Multi window**.
2. Tap the slider to turn Multi window On or Off.

NOTE: Only applications found within the Multi window panel can be active atop another current application on the screen.

Changing Wallpaper

1. Swipe the screen left to navigate to the blank (Classic Icon-Based) Home screen.
2. Press and hold the screen; then select **Set wallpaper**.
3. Select a wallpaper from one of the displayed categories.

Adding Apps or Widgets

1. Swipe the screen left to navigate to the blank (Classic Icon-Based) Home screen.
2. Press and hold the screen to display the Home screen menu.
3. Tap **Apps and widgets**, then tap the **Apps** or **Widgets** tab.
4. Tap and hold the App or Widget, drag it to the desired location, and release it.

Shopping for New Content

To browse and purchase your favorite books, magazines, newspapers, apps, kids' books, movies & TV shows and catalogs from the NOOK Store®:

1. Be sure you are connected to Wi-Fi.
2. From the home screen, tap **NOOK Shop**.

You can scroll through recommendations on the first screen of the NOOK Shop, browse by categories or search for a specific title, author or topics.

Once a valid credit card is saved to your NOOK account, you can make purchases with just a couple of taps by following the on-screen instructions.

Start Reading

You'll find all your NOOK content, like books, magazines, newspapers, apps, movies & TV shows and others in your NOOK Library.

1. From the home screen, tap NOOK Library (in the top right of the screen).
2. Tap a cover of the book or any item to open it.

Changing Text Size in a NOOK Book

1. Tap the center of the screen to bring up reading tools.
2. Tap the Font icon (**Aa**) at the top of the screen.
3. Select your preferred text size, font style, line spacing, background color, and other customizable options for your best possible reading experience.

Setting up Email

1. From the Home screen tap **Apps** → **Email**.
2. Enter your email address and password.
3. Tap **Manual setup**.
4. Select an email account type (POP3 account, IMAP account or Microsoft Exchange Activesync).
5. Follow the prompts to complete.

Google Account

Adding a Google Account

1. From the Home screen tap **Apps** → **Settings** → **General tab** → **Accounts**.
2. Tap **+ Add account** → **Google** and follow the prompts to complete setup.

IMPORTANT: Google Play™ Music , Gmail™, Google Plus™, Google™ Search, Google Maps™, YouTube™, Play Newsstand, Play Books, Play Games and Hangouts™ may require a Google email account.

Camera and Video

Take a Photo

1. From the Home screen, tap **Apps** → **Camera**.
2. Tap the grey Camera icon to take a photo.

Take a Video


- From the camera function, slide the Camera/Camcorder slider down to open the camcorder. Tap record to start recording a video.

Front Camera

Settings

Image Viewer

Effects

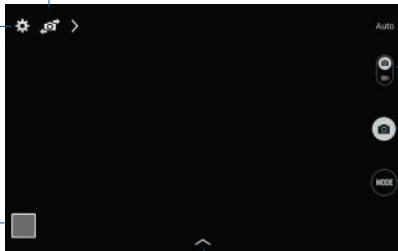

Slide up or down
to switch between
camera and video
modes

Take Picture

Mode

Internet

Opening a Browser

1. From the Home screen, tap **Chrome**.
2. Type the website address in the URL field and then tap **Go**.

Navigation

- **Go back:** Tap the left facing arrow.
- **Go forward:** Tap the right facing arrow.
- **Zoom in or out while browsing:** Double tap or pinch in or out.

For additional assistance and information, please refer to the comprehensive User Guide found in the NOOK Library on your device as well as on NOOK.com and Samsung.com. Please visit NOOK.com/support for tutorial videos, FAQ's or to contact Customer Service.

Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to recycle Samsung mobile devices and genuine Samsung accessories, and other unwanted electronics, in accordance with local regulations and through an approved recycler. Recycling programs for the foregoing and the battery may not exist in your area.

Proper disposal of your mobile device and its battery is not only important for safety, it benefits the environment. Batteries must be recycled or disposed of properly.

For more information about recycling your Galaxy Tab, go to:

<http://mobile.samsungusa.com/recycling/index.jsp> or call 1-800-822-8837 for more information.

To find the nearest recycling location, go to:

www.samsung.com/recyclingdirect or call 1-877-278-0799.

Notes
