

SAMSUNG

Galaxy Tab E nook®

Quick Start Guide



Galaxy Tab E NOOK® Key Features




USB/Charger Port

Headset Jack

Speaker

Back Camera

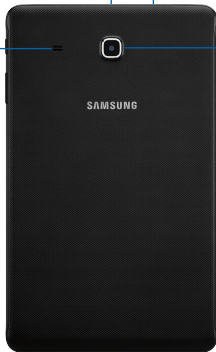

Basic Functions

Charging the Battery

Before turning on your tablet, charge it fully.

Your tablet comes with a charger and a USB cable. Plug the smaller end of the cable into the USB/charger port on your tablet and the other end into the charger. Then plug the charger into an electrical outlet to charge the tablet.



WARNING: Please use only an approved charging accessory to charge your tablet. Improper handling of the charging port, as well as the use of an incompatible charger, may cause damage to your tablet and void the warranty.

Turning Your Device On and Off

- Press and hold the **Power/Lock** button to turn On.
- Press and hold the **Power/Lock** button to turn Off.

Initial Device Configuration

1. Select a language and tap  or tap **ACCESSIBILITY**.
2. Follow the prompts to complete the set up process.

Locking and Unlocking Your Device

To lock your device screen:

- Press **Power/Lock** button.

To unlock your device from the lock screen:

- Press **Power/Lock** button then swipe your finger across the screen.

Customize Home & Lock Screen

Changing Wallpaper and Adding Widgets

Change the look of the Home and Lock screens with wallpaper.




- Touch and hold a blank space on a Home screen to access options.
 - **Wallpapers:** Change the look of the Home and Lock screens.
 - **Widgets:** Widgets are self-contained apps that run on a Home screen. There are all kinds of widgets, including links to a specific contact, Internet bookmarks, Gmail and email accounts, and many others.

Connecting to Wi-Fi and Bluetooth

Connecting to Wi-Fi

1. From the Home screen tap  **Apps** →  **Settings** →  **Wi-Fi**.
2. Tap the slider to turn Wi-Fi On.
3. Select a Wi-Fi connection from the list and enter a password if applicable and tap **CONNECT**.

Connecting to Bluetooth

1. From the Home screen tap  **Apps** →  **Settings** →  **Bluetooth**.
2. Tap the slider to turn Bluetooth On.
3. If necessary, tap **SCAN**.
4. Tap a device from the list to initiate pairing.
5. The devices automatically pair once the external device accepts the connection.

Using the NOOK

Start Reading

You'll find all your NOOK content, like books, magazines, and movies in your NOOK Library.

1. From the Home screen tap  **Apps** →  **NOOK Library**.
2. Tap a cover of the book or any item to open it.


NOTE: If you did not sign in to your NOOK account during initial setup, tap  **Apps** →  **NOOK Home** and create or sign in to your account.

Changing Text Size in a NOOK Book®

1. Tap the center of the screen to bring up reading tools while a book is open.
2. Tap on the **(Aa) Font** icon at the top of the screen.
3. Select your preferred text size, font style, line spacing, background color, and other customizable option for the best possible reading experience.

Shopping for New Content

Browse and purchase your favorite books, magazines, newspapers, kids' books, and videos from the NOOK Store®:

1. Be sure you are connected to Wi-Fi.
2. From the Home screen, tap the  **NOOK Shop** icon.

You can scroll through recommendations on the first screen of the NOOK Shop, browse by categories or search for a specific title, author, or topic.



Once a valid credit card is saved to your NOOK account, you can make purchases with just a couple of taps by following the prompts.

Downloading Apps



1. From the Home screen, tap  **Apps** →  **Play Store**.
2. Select the desired category and content and follow the prompts to download.

Email Account

Gmail

- From the Home screen, tap  **Apps** → **Google Folder** →  **Gmail**.
 - Tap **Add an email address** to create a new account or to log into an existing Gmail account.
 - Tap **TAKE ME TO GMAIL** if you have an account setup on your device.

Setting up Your Email Accounts

1. From the Home screen, tap  **Apps** →  **Email**.
2. Enter your email address and password and tap **NEXT**.
3. Follow the prompts to complete setup.

Installing Apps from Google Play™ Store

Downloading Apps

Apps are available to download from Google Play™ Store.

1. From the Home screen, tap  **Apps** →  **Play Store**.
2. Tap an app you want to download and tap **INSTALL** or the **app's price**.






Uninstalling Apps

1. From the Home screen, tap  **Apps**.
2. Tap **EDIT** →  **Uninstall/disable** displays on Apps that can be uninstalled or disabled.
3. Tap  **Uninstall/disable** and follow the prompts.




NOTE: Before you can access Google™ applications, you must first sign into or set up a new Gmail account.

Camera and Video

Take a Photo



- From the Home screen, tap  **Apps** →  **Camera**.
 - Tap  **Camera** icon to take a photo.
 - Tap  **Selfie** icon to take self portraits.
 - Tap **MODE**  **Mode** icon to select camera shooting modes.

Take a Video

- From the Home screen, tap  **Apps** →  **Camera**.
 - Tap  **Camcorder** icon to begin recording.
 - Tap  **Stop** to finish recording a video.

Gallery

Launching Gallery displays available folders. Folders are automatically created when you use another application to perform a function. For example, a Download folder is automatically created when you save an image from email or a Screenshots folder is automatically created when you capture a screenshot.

1. From the Home screen, tap  **Apps** →  **Gallery**.
2. Tap the drop-down menu in the upper left corner, and then tap **Time**, **Albums**, **Events**, or **Categories** to sort folders.
3. Depending on the view mode selected, either tap an image or video to view it, or first tap an album or folder and then tap an image or video.
4. Swipe left or right to view the next or previous image or video.

Internet

Launch the internet to view the latest news, get the weather and follow your stocks.

1. From the Home screen, tap  **Chrome**.
2. Type the website address in the URL field and tap **Go**.

Navigation

- **Go back:** Tap the left facing arrow.
- **Go forward:** Tap the right facing arrow.
- **Zoom in or out while browsing:** Double tap or pinch in or out.

NOOK Support

For additional assistance and information, please refer to the comprehensive User Guide found in the NOOK Library on your device as well as on NOOK.com and Samsung.com. You can also contact Customer Service at **1-800-THE-BOOK** to speak with a Customer Service Representative.

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and extend across the width of the page. There is no handwriting or other markings on the paper.