


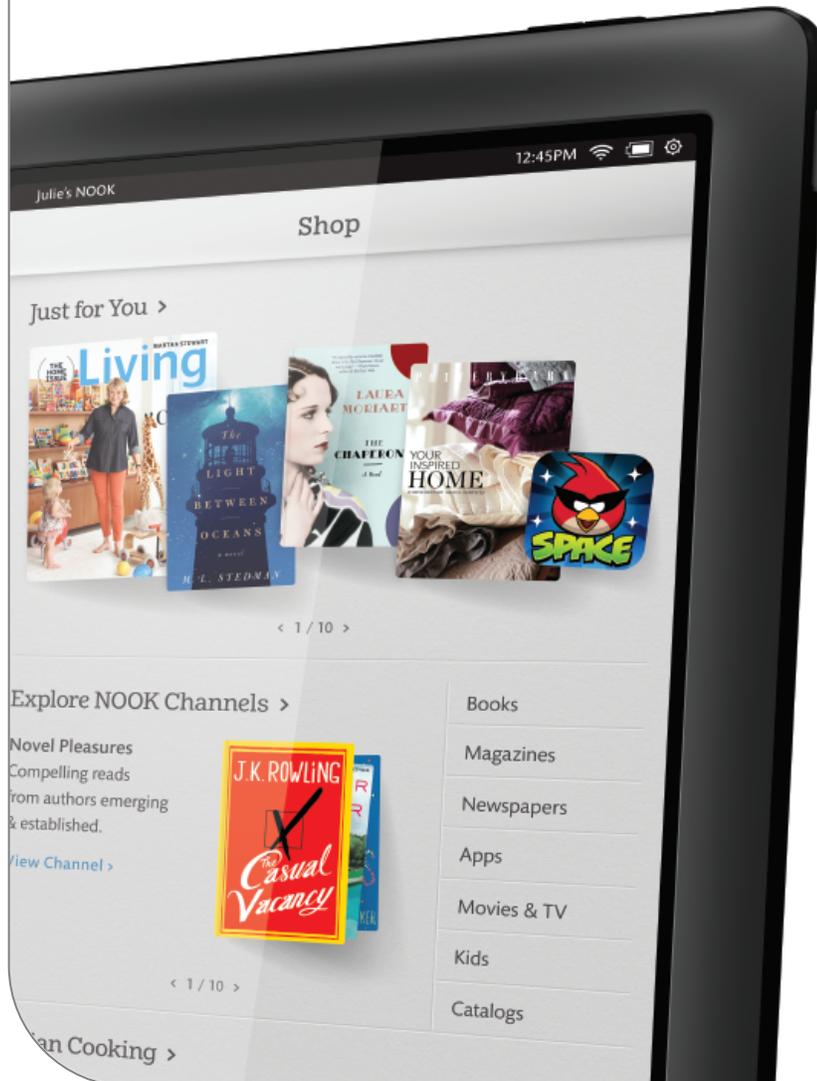

Welcome to your NOOK® HD+

Quick Start Guide



# 1 Charge your NOOK


You must charge your NOOK before using it the first time.

Plug your NOOK into a wall outlet using the Power Adapter and 30-pin Cable included with your device.

You can use your NOOK while it charges.


The charging indicator light on the bottom of your device will show orange when charging and will turn green when the battery is full. It takes approximately 4-5 hours to charge your NOOK.

**Note:** To charge your NOOK, you must plug it into a wall outlet. Your NOOK will not charge when connected to a computer.

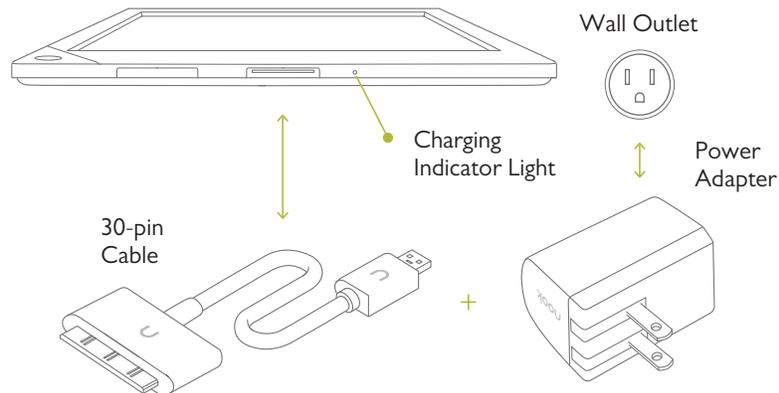


## Unlock your NOOK

Slide your profile icon or picture to the center of the circle to unlock your NOOK after waking it from sleep mode or turning it on.

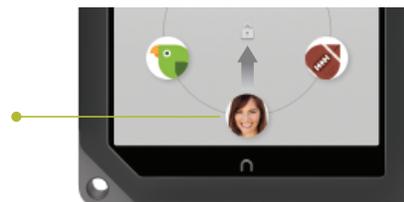

## 2 Get to know your NOOK

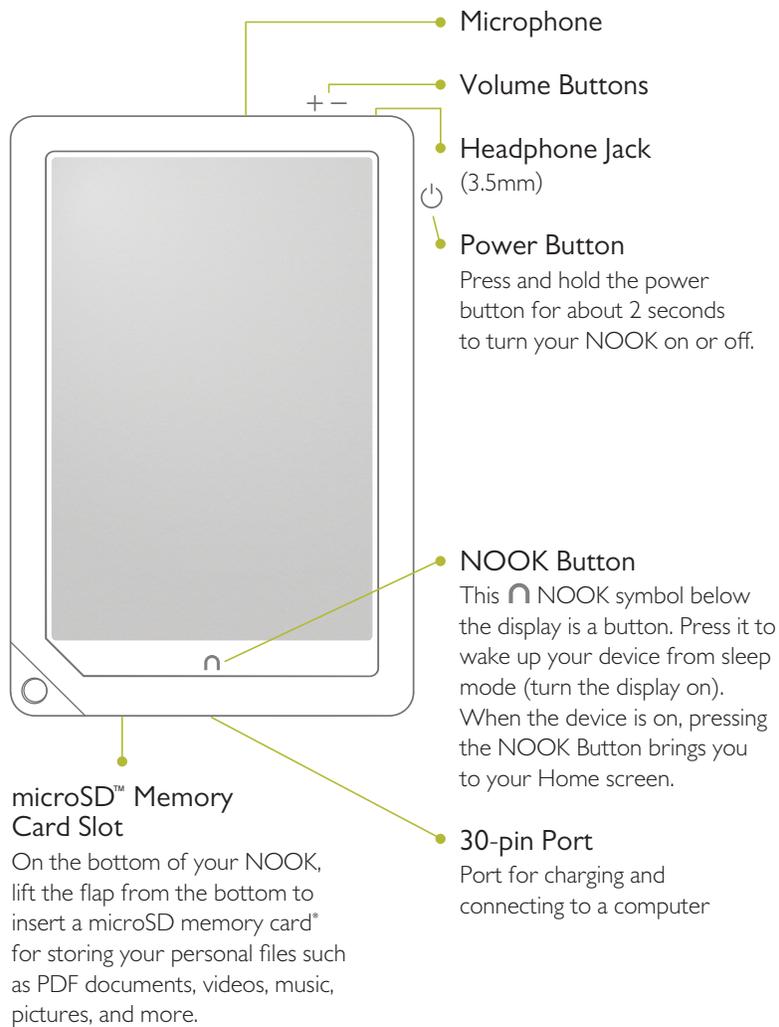

Microphone

Volume Buttons

Headphone Jack  
(3.5mm)

Power Button

Press and hold the power button for about 2 seconds to turn your NOOK on or off.

NOOK Button

This  NOOK symbol below the display is a button. Press it to wake up your device from sleep mode (turn the display on). When the device is on, pressing the NOOK Button brings you to your Home screen.

30-pin Port

Port for charging and connecting to a computer

microSD™ Memory Card Slot

On the bottom of your NOOK, lift the flap from the bottom to insert a microSD memory card\* for storing your personal files such as PDF documents, videos, music, pictures, and more.

\*microSD memory card not included

## 3 Set up: turning on your NOOK for the first time

### 1. Select the Language for Your NOOK

Follow the on-screen directions for setting up your NOOK.

### 2. Connect to a Wi-Fi® Network

To register your NOOK and to purchase and download books, videos, periodicals, and more, you must be connected to a Wi-Fi network.

### 3. Read and Accept the Terms of Service

### 4. Register Your NOOK

You must register your NOOK to your Barnes & Noble (BN.com) account. This gives you access to any items in your NOOK library and allows you to shop for new books, magazines, newspapers, movies & TV shows, and apps on your NOOK.

Please answer the questions on the screen and follow the step-by-step instructions to either register your NOOK to an existing BN.com account or to create a new one directly on your NOOK. Tap on the underlined sections to fill-in the blanks or complete the sentences with your information.

### 5. Set-up Your Profile

Select your interests and choose some free samples.

That's it. You've registered your NOOK. You're ready to shop at The NOOK Store™; read your favorite books, magazines, and newspapers, watch movies and TV shows, and more.

## 4 Home screen

### Home Screen

You can get to your Home screen at any time by pressing the NOOK Button .



### Status Bar

The Status Bar includes the time and icons for battery status, Wi-Fi connectivity, and a shortcut to Settings. Any notifications will also appear in the Status Bar.

### Your NOOK Today

Tap here to check in for daily updates, check the weather, and get new ideas for what to read next.

### Active Shelf

The Active Shelf holds books, magazines, newspapers, movies & TV shows, and apps that you have recently received (for example, purchased, downloaded, or borrowed). You can move back and forth through the Active Shelf by swiping your finger across its contents. Tap on an item to open it.

### NOOK Button

Press the NOOK Button  at anytime to go back to your Home screen.

### Nav Buttons

Tap the Nav Buttons on your Home screen to open various features on your NOOK, such as *library*, *apps*, *web*, *email*, and *shop*.

### Recent Drawer

Tap here to view recently opened books and other items, or recently used apps.




## 5 Touch navigation

The following gestures help you to use and navigate on your NOOK®.

### Tap & Double Tap

To select a feature or item, touch your fingertip quickly to the screen once, as though you were tapping a key on a keyboard. Double tap your finger quickly on a book cover in your library to bring up additional details.

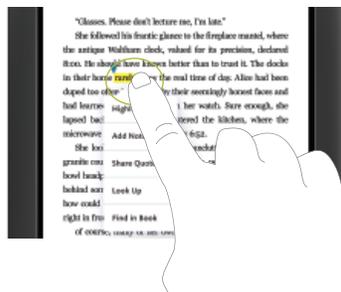


### Press & Hold

Touch your finger to the screen and hold it there for approximately 2 seconds. In many situations, pressing and holding will open a menu, such as the Highlight and Look Up menu while reading.

### Drag

Press and hold on an object and slide it to another location on the screen.

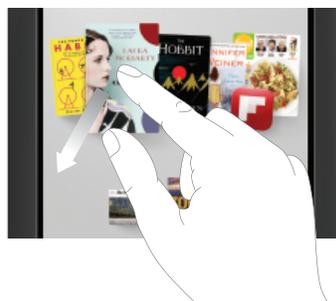

## Touch navigation, continued




### Scroll

Slide your finger up or down the screen to scroll through a vertical list.

### Swipe

Glide your finger across the screen, usually to the left or the right, to turn pages or scroll through a list.

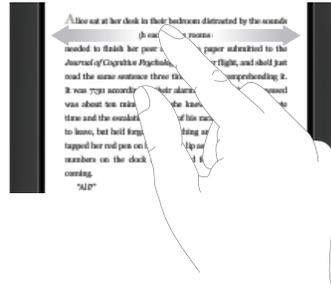

### Pinch or Zoom

Place two fingers – typically your thumb and forefinger – about an inch apart on the screen. Slide them together to “pinch in.” In most situations, pinching in shrinks the image.

Slide your fingers apart to “pinch out.” In most situations, pinching out enlarges an image.

## 6 Start reading

### Find a Book

You'll find books, magazines, newspapers, movies & TV shows, catalogs, and apps in your Library. To get to your Library, press the NOOK Button  to display your Home screen. Then tap *library*. Your Library contains all your content, which you can sort and view the way you want.

### Open a Book

To open a book or item, tap on its cover.

### Turn Pages


There are two ways to turn the page of a book forward or back:

- Tap the right or left edge of the screen.
- Swipe from right to left or left to right.


### Change Text Size & More

When in a book, tap the center of the screen or the up arrow at the bottom of the screen to bring up the Reading Tools. To adjust the text, tap the text icon and select your text size, font style, and other options. You can also:

- Browse the table of contents and view your notes and bookmarks
- Search for words or phrases
- Go to a specific page number
- Show the time and status bar

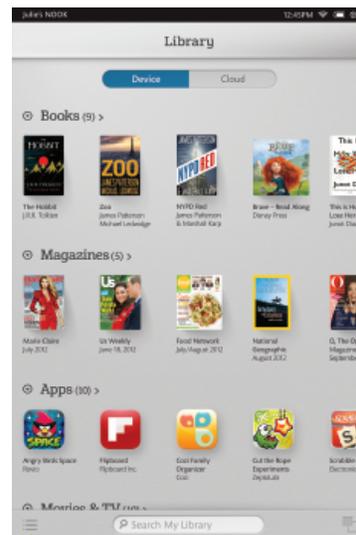

Tap here and then tap Refresh to sync.

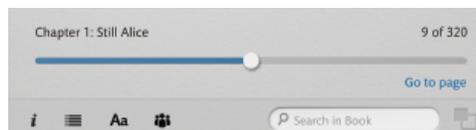

## 7 Discover new favorites

### Shop at The NOOK Store

Shopping is fun and easy on your NOOK.

To visit The NOOK Store:

1. Connect to Wi-Fi
2. Press the NOOK Button  to display your Home screen
3. Tap the *shop* icon

### Browse Channels & Categories


- Swipe to scroll through NOOK Channels for recommendations that match your interests.
- Tap on a category to see books, magazines, movies, TV shows, and more.

### Search The NOOK Store

Tap in the search field to display an on-screen keyboard to search by a title, author name, or topic.

### Just Tap to Buy

Once your BN.com account is set up with a valid credit card, you can make purchases with the tap of your finger. Just tap on the *Buy* button next to the book, magazine, newspaper, movie, TV show, catalog, or app you want. Tap *Confirm* and your NOOK downloads the item to your Home screen and your Library automatically.

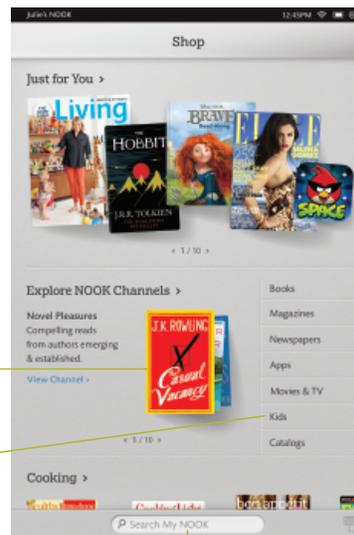

## 8 Learn more

### User Guide

In addition to this Quick Start Guide, please read the User Guide for complete information about all the features of your NOOK. You'll find a copy of the User Guide in your Library on your NOOK.

### Additional Support

Please visit [NOOK.com/support](http://NOOK.com/support) for additional information, including:

- A PDF version of the *NOOK® HD+ User Guide* that you can download to your computer
- Tutorial videos
- Live Chat with a NOOK Expert
- Frequently Asked Questions

You can also tweet Customer Service @NOOK\_care.

barnesandnoble.com llc, 76 Ninth Avenue, New York, NY 10011 USA.

© 2012 barnesandnoble.com llc. All rights reserved.

NOOK, NOOK Store, and the NOOK logos are trademarks of barnesandnoble.com llc or its affiliates.

Patent Pending. Screenshots and product images are simulated and for instructional purposes only.

They may differ from the actual product and are subject to change without notice. Content shown may vary from actual available content, which may change without notice. Your use of NOOK is subject to the NOOK Terms of Service located in the Settings area of your device and here: [www.NOOK.com/support](http://www.NOOK.com/support).

Contains Reader® Mobile technology by Adobe Systems Incorporated. Adobe®, Reader® and Reader® Mobile are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries. Wi-Fi® is a registered mark of the Wi-Fi Alliance. All trademarks or registered trademarks that are not the property of barnesandnoble.com llc or its affiliates are the property of their respective owners. Certain third-party applications may require membership.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Ver. 2.0.0.A 640-00051-01 A